Area Chart

Good Farth Trade Tower

Good Earth Trade Tower	
Floor No.	Super Area (Approx in SF)
1st	17000
2nd	25000
3rd	25000
4th	25000
5th	25000
6th	25000
7th	25000
8th	25000
9th	25000
10th	25000
11th	25000
12th	25000
14th	19500
15th	16000
16th	9500